

Energizer®

H240S



FR Guide de Démarrage Rapide

ES Guía de Inicio Rápido

EN Quick Start Guide

PT Guia de Inicio Rápido

RO Ghid de Pornire Rapidă

BG Наръчник за бързо начало

IT Guida di Avvio Rapido

KS 빠른 시작 가이드

TR Hızlı başlangıç Kılavuzu

EL Σύντομος Οδηγός Έναρξης

RU Руководство для быстрого старта

VN Hướng dẫn nhanh

NL Snelle Start Handleiding

SV Snabbstartsguide

JA クイックスタートガイド

TL Mabilis na gabay sa pagsisimula

HI त्वरित आरंभ गाइड

DE Kurzanleitung

FI Pikaopas

 
ZHX 快速入门指南

ZHO 快速入門指南

کتابچہ چہ برای فوری رہنمائی

UR دليل البدء السريع

AR

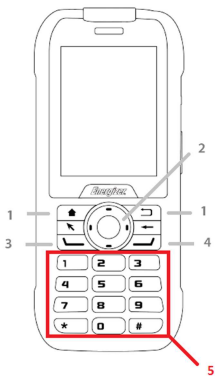


1.1




1.2

 
2

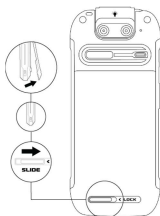

 
2.1

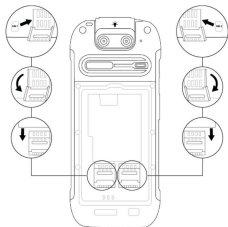

 
2.2



 2.3

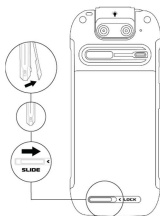

 3.1

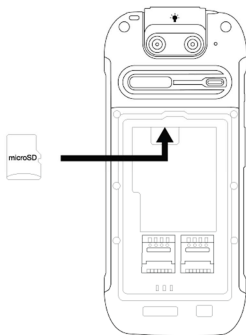

3.2

INTRODUCING YOUR MOBILE PHONE

Learn about your mobile phone's layout, keys, display and icons.

Keys

The following table offers you a quick description about the phone's keys:

Item	Key	Function
1	Function	Perform the action indicated by the symbol on the button.
2	Navigation	In standby mode, you can access the user-defined functions, in menu mode, scroll through menu options.
3	Call	Open the list of recent calls or make a call to the displayed number. You can answer an incoming call.
4	Hang up	Ends a call or reject an incoming call. Hold down for 3 seconds to turn on / off the phone.
5	1.....0	Enter numbers, text and / or special characters.











Screen

The screen of your mobile phone is designed as follows:

(See Figure 1.2 – Page 2)

Icons

Learn about the icons that are displayed on the top of the screen, indicating the status of the phone:

Icon	Function description
	Represent current network signal. The more bars, stronger the signal.
	Battery status. More bars indicate more battery.
	Unread SMS.
	Alarm set.
	Bluetooth function activated.
	Profile set to Silent Mode.
	Profile set to Meeting Mode.
	Profile set to Outdoor Mode.
	Headset connected.
	Roaming indicator.

PREPARING YOUR MOBILE PHONE

Get started setting up your mobile phone for its first use.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.

To install the SIM card and battery,

1. Remove the battery cover.

(See Figure 2.1 – Page 3)

2. Insert the SIM card.

Your phone has 2 SIM card slots to allow you use 2 SIM cards and switch between them.

(See Figure 2.2 – Page 3)

- Place the SIM card in the phone with the gold-colored contacts facing down.
- Without inserting a SIM card, you can use your phone's non-network services and some menus.

3. Insert the battery.

(See Figure 2.3 – Page 3)

4. Replace the battery cover.

Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card.

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover.

(See Figure 3.1 – Page 4)

2. Insert a memory holder with the label side facing up.


(See Figure 3.2 – Page 4)

USING BASIC FUNCTIONS

Learn how to perform basic operations of your mobile phone.

Turn your phone on and off

To turn your phone on,


1. Long press the power button [].
2. Type in your PIN number and press OK (if it is needed).

To shut down your phone, go to step 1 above.

Access menus and applications

To get access to the Menu and Applications,



To access your phone's menus,

1. In Idle mode, press the left soft key < Menu > to access Menu mode.
2. Use the Navigation key to scroll to a menu or option.
3. Press < Select>, < OK>, or the Confirm key to confirm the highlighted option.
4. Press < Back> to move up one level, press [] to return to Idle mode.



Use basic call functions

Learn to make or answer calls in this section.

Make a call:

1. In Idle mode, enter an area code and a phone number.
2. Press [] to dial the number.
3. To end the call, press [].

Answer a call:

1. When a call comes in, press [].
2. To end the call, press [].

Send and view messages

In this section, learn to send and view text (SMS).

To send a text message:

1. In Menu mode, select Messaging → Write message → Text message.
2. Enter your message text.
3. Press < Options > → Send to.
4. Enter a destination number or select from phonebook.
5. Press < OK > or add depending of previous step.

6. Press <Options> → Send.

Add contacts


Learn the basics of using the phonebook feature.

Add a new contact:

1. Select Menu.
2. Select Phonebook → Add new contact.
3. Select the storage (Phone, SIM1, or SIM2).
4. Enter contact information.
5. Press < Options > → Save to add the contact to memory.

Find a contact

1. In Menu mode, select Phonebook.
2. Enter the first few letters of the name you want to find.
3. Select the contact's name from the search list.

Once you have found a contact, you can call the contact by pressing []

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio:

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select Multimedia → FM radio.
3. Press the Navigation down key to start the radio.
4. Control the FM radio using the Navigation keys.

Listen to music files:

After transferring music files to the "My Music" folder of your phone or memory card,

1. In Menu mode, select Multimedia → Audio Player.
2. Select a music category → a music file.
3. Control playback using the Navigation keys.

Browse the web

Learn to access your favorite web pages.

Browse web pages:

1. In Menu mode, select Browser → Internet service to launch your service provider's homepage.
2. Navigate web pages using the Navigation keys.

USING THE CAMERA

Learn the basics to capture and view photos.

Capture photos

1. In Menu mode, select Camera to turn on the camera.
2. Aim the lens at the subject and make any adjustments.
3. Press the Confirm key to take a photo.
The photo is saved automatically.
4. Press < Back > to take another photo (step 2).

View taken photos

Press the left soft key then choose Photos to access to the photos gallery quickly.

Camera options

Entering in the Camera options you will be able to configure the following options:

Camera settings:

Select a shutter sound every time you take a picture.

Change the exposure value to adjust the photo brightness.

Adjust the contrast to differentiate dark and light areas.

Change the Anti-flicker value to eliminate the fluorescent effect on the photos.

Modify the delay timer to take self-photos.

Change the continuous shot number to take a series of photos.

Image settings:

You can change the image size.

You can adjust the image quality.

White balance:

Chose a color scheme according to the ambient.

Scene mode:

Allow you to select the night mode (extra light) or let the phone to choose the best mode.

Effect settings:

Add a color effect to the photos taken.

Storage:

Let you choose where to store the photos taken.

CONNECTING TO INTERNET

Learn the basics to configure your phone and connect to Internet.

Add a new connection

1. In Menu mode, select Settings → Connectivity → Data account.
2. Press < Options > then Add Data account.
3. Set the parameters according to your carrier.

The basic parameters are:

- Account name
- APN
- Username
- Password
- SIM selection (if necessary)

Some carriers use Proxy Servers, refer to your carrier configuration for more information.

4. Once the needed parameters are set, press < OK > and confirm the new connection pressing < Yes >.

To use the connection as default, press < Options > then Change default.

To add another connection, repeat all the steps.

Configure the browser

Once the connection is added, you need to configure the Internet browser:

1. In Menu mode, select Services → Internet service → Settings → Data account, select the SIM card (if necessary) and choose the connection created in the previous step.

Switch between carriers (SIM cards)

If you use multiple SIM cards and want to switch to another one, follow this steps:

1. Configure the connection for both SIM cards (refer to “Add a new connection”).

2. In Menu mode, select Services → Internet service → Settings → Select profile and choose SIM1 or SIM2 according your necessities.

Is possible to select Always ask, then the browser will ask which SIM you want to use before start the Internet session.

USING THE BLUETOOTH

Learn about your phone's ability to connect to other wireless devices for exchanging data.

Turn on the Bluetooth wireless feature

1. In Menu mode, select Settings → Connectivity → Bluetooth.
2. Select the option Power.
3. Press the left soft key to turn it On.
4. To allow other devices to locate your phone, scroll down to Visibility and press the left soft key to turn it On.

Find and pair with other Bluetooth enabled devices

1. In Menu mode, select Settings → Connectivity → Bluetooth → My device → Search new device.
2. Scroll to a device and press < Select>.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press <OK>.

When the owner of the other device enters the same code or accepts the connection, pairing is complete.

Send data using the Bluetooth wireless feature.

1. Select the file or item from one of your phone's applications that you want to send.
2. Press < Options > → Send → Via Bluetooth → Select the device name then accept the file on the receiver.

Receive data using the Bluetooth wireless feature

1. Enter or accept the PIN for the Bluetooth wireless feature and press < OK> (if necessary).
2. Press < Yes> to confirm that you are willing to receive data from the device (if necessary).

Change the Bluetooth device name

1. In Menu mode, select Settings → Connectivity → Bluetooth → My name.
2. Write the name you desire then press Options → Done.

Choose the storage location









1. In Menu mode, select Settings → Connectivity → Bluetooth → Advanced → Storage.
2. Select Memory card if your phone have one inserted, otherwise select Phone.






SECURITY INFORMATION

Please remember to obey relevant rules and regulations whenever use your phone. This will prevent bad effect from you and the environment.

General security

	Don't make or receive handheld calls while driving. And never text while driving.
	Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.
	Your phone may produce a bright or flashing light.
	Small parts may cause a choking.

	<p>Don't dispose of your phone in fire.</p>
	<p>Your phone can produce a loud sound.</p>
	<p>Avoid contact with anything magnetic.</p>
	<p>Keep away from pacemakers and other electronic medical devices.</p>
	<p>Avoid extreme temperatures.</p>
	<p>Switch off when asked to in hospitals and medical facilities.</p>
	<p>Avoid contact with liquids. Keep your phone dry.</p>
	<p>Switch off when told to in aircrafts and airports.</p>

	<p>Don't take your phone apart.</p>
	<p>Switch off when near explosive materials or liquids.</p>
	<p>Only use approved accessories.</p>
	<p>Don't rely on your phone for emergency communications.</p>
	<p>Warning electrical hazard!</p> <p>To avoid serious injury do not touch charger pins. Unplug the charger when not in use. To unplug a charger or an accessory, hold and pull the plug, not the cord.</p> <p>The power adaptor is the switch off device of the equipment. The wall power socket should be located near the equipment and easily accessible.</p>

Look at the adapter regularly, specifically at the plug and the layer to detect any damages. If the adapter is damaged, you can't use it until it's fixed.

Plug in the adapter to a power outlet which is easily accessible. Always unplug the adapter after using it.

Use only the adapter provided with the device.

Do not expose your device to direct sunlight, like on your car's dashboard, for example.

In case of overheating do not use the device.

Be careful when using the device while walking.

Do not subject the device to severe impact or drop it from high position, it could cause damages or malfunctions.

Do not disassemble, modify or fix the device by yourself.

To clean the device use a clean and soft rag. Do not use any chemical product or detergent.

Information to consumers in application of EU WEEE.



This product is subject to European Union regulations that promote the re-use and recycling of used electrical and electronic equipment. This product required the extraction and use of natural resources and may contain hazardous substances. The symbol above, on the product or its packaging, indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handling it over to a designated collection point for the recycling of waste electrical and electronic equipment.

The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service, or the store from which you purchased the product.

Recommendations:

- Do not disassemble, open or tear up the device or the batteries.
- Do not expose the product or the battery to heat or fire. Avoid storage the device directly to the sunlight.
- Do not short-circuit a battery. Do not stock batteries in a drawer where it could short-circuit between each other or get in contact by any other metallic objects.
- Do not cause mechanical shocks to batteries.
- In case of the leak, do not let the liquid get in contact with your eyes or skin. If that happens wash with clear water the affected zone and seek medical advice.
- Follow the marks plus (+) and minus (-) on the battery and the device and ensure that the use is correct.
- Do not use any accessories or batteries that are not made to be used with the device.
- Monitor the use of a batteries by children.
- Consult a doctor immediately in case of ingestion of an element or a battery.
- Always buy the battery recommended by the manufacturer of the device.
- Always maintain the product and the battery clean and dry.

- Wipe the terminals of the product or the battery, if it became dirty, with a clean and dry rag.
- It is necessary to charge the battery before its use. Always use the charger and read the manufacturer instructions or the manual of the device for the instructions regarding charging.
- Do not leave a battery charged when it's not going to be used.
- After long periods of storage, it may be necessary to charge and discharge the battery several times in order to achieve maximum performance.
- Always keep the original documentation of the device, you might need it later for future reference.
- If it's possible, take out the battery of the device when it's not used.
- Do not store your device in extremely hot or cold places like inside of a car during the summer. It might damage the device and cause explosion of the battery. It's recommended to use the device in a range of temperatures between 5°C and 35°C.

Prevention of the hearing loss

There are irreversible hearing loss risks if the receiver, the ear buds, the speaker or the headset are used at high volume. Regulate the volume to a level that does not present a danger. Over time, you can be used to a higher volume that

will seem normal, but is harmful to your hearing. If you are experiencing buzzing or muffled speech, we suggest that you consult a hearing specialist. Higher the volume, higher the risk that your hearing may be damaged quickly. Hearing specialists suggest the following recommendations:

- Limit the duration of use of high volume in headphones, the speaker or the handset.
- Avoid turning up the volume to cover a noisy environment.
- Turn the volume down if you cannot hear people speaking near you.

Please take time to read this important section.

RADIO WAVES

Proof of compliance with international standards (ICNIRP) or with European Directive 2014/53/EU (RED) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user any other person is an essential requirement of these standards or this directive.

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

Body-worn SAR testing has been carried out at a separation distance of 1.5 cm. to meet RF exposure guidelines during body-worn operation, the device should be positioned at least this

distance away from the body. If you are not using an approved accessory ensure that whatever product is used is free of any metal and that it positions the phone the indicated distance away from the body.

For more information you can go to www.energizyourdevice.com

Additional information about electromagnetic fields and public health are available on the following site. <http://www.who.int/peh-emf>.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or USB data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 1.5 cm away from the body.

Please take time to read this important section.

RADIO WAVES

Proof of compliance with international standards (ICNIRP) or with European Directive 2014/53/EU (RED) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user any other person is an essential requirement of these standards or this directive.

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

EU Regulatory Conformance

Hereby, this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

For the declaration of conformity, visit the Web site www.energizeyourdevice.com

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU)

Notes:

- Due to the used enclosure material, the mobile phone shall only be connected to a USB Interface of version 2.0 or higher. The connection to so called power USB is prohibited.

- The adapter shall be installed near the equipment and shall be easily accessible.

- Do not use the mobile phone in the environment at too high or too low temperature, never expose the mobile phone under strong sunshine or too wet environment. The suitable temperature for the phone and accessories is -10°C-55°C.

- When charging, please place the phone in an environment that has a normal room temperature and good ventilation. It is recommended to charge the phone in an environment with a temperature that ranges from 5°C~25°C. Please ensure to use only the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the phone and the guarantee article.

- CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED WITH AN INCORRECT TYPE. DISPOSE USED BATTERIES ACCORDING TO THE INSTRUCTIONS

- Excessive sound pressure from earphones and headphones can cause hearing loss.

For more information you can go to www.energizyourdevice.com

Additional information about electromagnetic fields and public health are available on the following site. <http://www.who.int/peh-emf>.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or USB data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 1.5 cm away from the body.

We, **AVENIR TELECOM**,
(208, Boulevard de Plombières, 13581 Marseille Cedex 20, FRANCE)
Hereby declares that:

ENERGIZER complies with the standards and provisions of the directives. The certificate of conformity procedure defined in article IV of directive 2014/53/EU has been under the control of the following organization:

BAY AREA COMPLIANCE LABORATORIES CORP.

1274 Anvilwood Ave. Sunnyvale, CA 94089. USA

www.baclcorp.com

Phone: +1 408 732 9162 Fax: +1 408 732 9164

The full text of the certificate of conformity of the device is available upon request by mail at the following address: **AVENIR TELECOM** - 208, Boulevard de Plombières, 13581 Marseille Cedex 20, France.

2017/09/07

(Date)


Jean-Daniel BEURNIER / CEO

(Name and signature of authorized person)

Maximum SAR for this model and conditions under which it was recorded:	
GSM 900	0.058 W/kg 10g Head SAR 0.303 W/kg 10g Body SAR
DCS 1800	0.612 W/kg 10g Head SAR 1.04 W/kg 10g Body SAR
WCDMA 800	0.082 W/kg 10g Head SAR 0.136 W/kg 10g Body SAR
WCDMA 2100	0.180 W/kg 10g Head SAR 0.803 W/kg 10g Body SAR
LTE Band 1	0.134 W/kg 10g Head SAR 0.630 W/kg 10g Body SAR
LTE Band 3	0.377 W/kg 10g Head SAR 1.080 W/kg 10g Body SAR
LTE Band 7	0.057 W/kg 10g Head SAR 0.835 W/kg 10g Body SAR
LTE Band 20	0.116 W/kg 10g Head SAR 0.116 W/kg 10g Body SAR
LTE Band 28A	0.231 W/kg 10g Head SAR 0.467 W/kg 10g Body SAR

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

